

User's manual

MegaReencle Food Waste Composter

To ensure safe use of the product, please read the user's manual before use.

Table of Contents

- I. Safety note
- II. Correct installation method
- III. Product name and operation parts
- IV. Use instruction
- V. Sterilization mode
- VI. Material you can and cannot put in
- VII. Service
- VIII. Administrator manual
- IX. Warranties and compensation on each type

I. Safety note

This is about the safety, so make sure you follow it! Please read the precaution carefully and use them correctly.



When cleaning, do not use flammable materials such as gasoline, thinner, etc. (It can be a cause of fire and explosion.) Avoid adding any bones, etc. (It may lead to the operation disturbance of stirring wing and fetal machine failure.)

When opening and closing the upper inlet, be careful not to get your arm or hand caught between the upper inlet and the lid. (It can be a cause of severe injury.)



(There is a risk of severe injury.)

II. Correct installation method

Install in an enclosed space or building where you can avoid ultraviolet rays and rain.



2 **/~~ **/~~ **/~~





Install it at a well-ventilated location. (Avoid installing in enclosed areas, if possible.)



- Electrical wires (2EA) at the short circuit breaker
- Grounding wire(1EA)

For installations

6

avoid direct sunlight and rain.keep them warm in the winter to prevent them from freezing. Avoid installing it in areas where it can catch rain or wet places such as near a faucet, etc.

Set it up level on a flat surface. (Vibration, noise, and obstructed lower airflow cause odors and malfunctions)



Connect the power line, and set up the scales in their respective corner locations.

Model	Microorganism	Water
RSV2B_30kg	3 Packs	30L
RSV2C_50kg	5 Packs	50L
RSV2D_100kg	10 Packs	100L

III. Product name and operation parts



Screen operation parts

Control the entire product sequence including input measurements, internal temperature and humidity management, part activation, etc. Red push button switch (emergency stop button) Upon the operation, turn right to activate Upon the emergency stop, push to stop

Status Indicator LED

Immediate confirmation with a red light, when an error occurs. You can check the error details and time of occurrence on the program error record screen.

IV. Use instruction



V. Sterilization mode



VI. Material you can and cannot put in



VII. Service

Turn off the device and unplug it from the power source during repair, replacement, cleaning, and maintenance.

1 Replacing deodorizing tar

- Open the cover on the right side based on the front of the body.
- Pelease the deodorizer canister fixture and remove the deodorizer canister.
- **③** Replace the filter tar inside the deodorizing canister.



2 How to clean filtration filters

- After stopping the machine, open the machine top cover.
- 2 Clean the right-hand filtration filter with air and water.
- 3 Close the lid and operate the machine.



3 Cleaning and inspection

- For your safety, press the emergency stop button.
- 2 When you want to restart, turn the red push button switch to the right.
- S For safety reasons, turn off the power when cleaning and inspecting the stir container.

4 How to care the food cleaner (microbial)

- The food cleaner is best, when it is damp.
- If the food cleaner looks dry, add water until it is moist.
- Stop adding food when it's too wet and mushy, and start adding food again when it's fluffy.





Good status

Bad status

Turn off the device and unplug it from the power source during repair, replacement, cleaning, and maintenance.

Log-in screen

- Transmit data based on member information when inputting food.
- Tap the top right corner of the screen 5 times to convert your user account/administrator account to log in.



2 User screen

- Display the amount of food you can add.
- Displays 24 hours of cumulative inputs based on first inputs.
- O Display food inputs for the day.

🗛 Mega Reencle



3 Manual operation screen

- 1 Manual control over whether or not each component works.
- ② Used for A/S and component testing.



	Control		DACK
heating setting (front)		automatic	stop
heating setting (back)		automatic	stop
Dryer setting	manual	automatic	stop
light 1 red	green	yellow	Off
Light 2 red	green	yellow	Off
Light (inside)	automatic	On	Off

Turn off the device and unplug it from the power source during repair, replacement, cleaning, and maintenance.

4 Parameter screen

- Language selection by country.
- 2 Automatically turn on red light in sequence when an error occurs.

3 General settings

- ▶ Language setting : □ 한국어 / □ 中文 / □ 日本語 / ☑ English
- ▶ Weighing mode : ☑ Have □ None
- ► Total input limitation : 1,000kg 🗹
- ▶ 24H Input limitation : 50 kg 🗹
- ► Login setting : Mone □ linking
- ▶ Inlet mode : □ Automatic ☑ Manual
- ▶ Heating temp setting(Front) : Target 55°C ☑ Flot range 1°C ☑
- ▶ Heating temp setting(Back) : Target 55°C ☑ Flot range 1°C ☑
- ▶ Heating alarm settings : Max temp 80°C ☑ Min temp 15°C ☑ Preparation time 120mins ☑
- ▶ Ventilator humidity setting : Humidity 20% ☑
- ▶ Humidity alarm setting : Time : 360min ☑ Humidity 100% ☑
- ▶ Forward running interval : Run : 50min 🗹 Interval : 10min 🗹
- ▶ Reverse running interval : Run : Omin ☑ Interval : 1min ☑
- ► Sterilization mode setting : Temperature 70°C ☑ Time 60min ☑
- ▶ Weighing time : Before input 2s ☑ After input 5s ☑
- ► Screen saver setting : Time 120min ☑
- ► Viewing window warning : On
- ▶ Weighing source : □ 485 □ Loadcell1 □ Loadcell2
- ► Weight decimal display : ✓ Yes □ No
- ▶ Weight unit : 🗹 KG 🗆 LBS
- ▶ Power saving mode setting : 48h 🗹
- ▶ Forward running interval : Run : 30min 🗹 Interval : 10min 🗹
- ▶ Reverse running interval : Run : Omin ☑ Interval : 1min ☑
- ► Heating temp setting(Front) : Target 50°C ☑ Flot range 1°C ☑
- ► Heating temp setting(Back) : Target 50°C ☑ Flot range 1°C ☑
- ▶ Ventilator operation term : Run : 30min 🗹 Interval : 10min 🗹

Mega Ree	Parameter DBACK		Mega Re	Parameter	€ВАСК
General settings			Weighing warning settir	ng time: 5min 👿 🛛 weig	ght: 5KG 😻
Language setting	□한국어 □中文 □日本語 ☑English	G	Login setting	⊠none ⊡linking	
Veighing mode	⊡have □none	iving	Inlet mode	🗌 automatic 🗹 mar	nual
Veight limitation for varning	max: 900KG 👿 min: 400KG 👿	y Earth	Heating temp setting	target: 55℃👿 floa	t range: 1°C 😿
Total input limitation	200KG 😿 🛛 reset	the	Heating alarm setting	gs max temp:80°C 😿 ι	min temp: 40°C
				proporation time: 2	0min 🐱
24H input limitation			Mega Re	encle	unnit ⊡ SBACK
24H input limitation	50KG		Mega Re	Parameter	
24H input limitation Mega Rec Humidity setting	50KG Parameter		Mega Re	Parameter	val: 10min ₩
24H input limitation Mega Ree Humidity setting Inlet setting	50KG ♥ Perameter target: 70% ♥ float range: 10% ♥ timeout: 10s ♥ low speed: 2V ♥ does caesing voltage 5V♥		Mega Re Agitator operation interval weighing time	Preparation time. 2 Parameter run: 50min 😿 inter before input: 55 🐼	val: 10min 🕅
24H input limitation Mega Ree Humidity setting Inlet setting	50KG ♥ Parameter target: 70% ♥ float range: 10% ♥ timeout: 10s ♥ low speed: 2V ♥ door opening voltage 5V ♥ door closing voltage 5V ♥		Agitator operation interval weighing time Screen saver setting	Parameter run: 50min 🐼 inter before input: 55 🕅 g time: 30min 🐼	val: 10min 🕅
24H input limitation Mega Ree Humidity setting Inlet setting	50KG ♥ Parameter target: 70% ♥ float range: 10% ♥ timeout: 10s ♥ low speed: 2V ♥ door opening voltage 5V ♥ door closing voltage 5V ♥ (Express)closing time: 1000ms ♥	Giving Earth	Agitator operation interval weighing time Screen saver setting Viewing window wamin	Perameter Parameter run: 50min 🐼 inter before input: 55 🐼 g time: 30min 🕅	val: 10min 🕅 after input: 55
24H input limitation Mega Rec Humidity setting Inlet setting	50KG Parameter target: 70% float range: 10% timeout: 10s low speed: 2V door opening voltage 5V door closing voltage 5V (Express) closing time: 1000ms humidity: 30%	Giving Earth the	Mega Re Agitator operation interval weighing time Screen saver setting Viewing window warnin Weighing source	run: 50min 🕅 inter before input: 5s 🕅 g time: 30min 🕅 ig on/off •	val: 10min 🕅 after input: 55 🕅

Turn off the device and unplug it from the power source during repair, replacement, cleaning, and maintenance.

5 Status confirmation / Error records / Inlet record screen

- It is possible to check the real-time status of temperature, humidity, operation, etc.
- It is possible to check when the error occurred and what happened.
- It is possible to check the contents of inlet such as inlet time, weight, etc.

A Me	ega R	eenc	le	(BACK	Mega Reer	ncle	€ВАСК	-1	Mega	Reencl	е	€ВАСК
Power	Operating mode	Agitator motor	Inverter status	Air temperature	Agitator shaft status	Error occurrence time	Error code	Error log		Input time	Input weight	Register method	"ID"
on	manual	on	normal	36.9°C	normal]							
heater(front)	Temperature of heater(front)	heater(back)	Temperature of heater(back)	Air humidity	Light	<u>G</u>			GIV				
on	57.1°C	on	57.1°C	36.1%	off]3	No data		ng		No	data	
Inlet sensor(0,C,D)	Inlet button	Viewing window	Outlet	Ventilator/dryer	LED (right)	Ear	NO Gata.		Ear				
off,on,off	off	on	on	on	G]5			th				
LED (left)	Wind pressure	error message	Daily total input	current weight:	lock	the			the				
G	0	0	0kg	78.11kg	Locked	Z			Z				
					Breath	ex r		qtea	AX0 AX0				Breath

6 WiFi connection

- Tap the upper left corner of the screen 5 times to exit the application
- 2 Connect the Wi-Fi in the Settings window
- 8 Re-run the MegaReencle application



7 Administrator webpage

- Transmit real-time data to the administrator's website when food is added.
- It is possible to check the current status of installed product remotely.
- ③ Grant a price on each Kg of installed product

				A State of the second s
이번달 누적 무게		이번달 총 비용은		매달 평균령은
186	5.800	0		186.800
	Kg 입니다.	Lever . marked	권 입니다.	Kg guu
	202214	05.0		
	tote -			
날짜	시간 무게 누	적무계 비용	50	CORRECTION OF
2023.05.04 05	3404 0.5kg 2	7.6kg 0원	32.00	
2023.05.04 05	36:24 0.4kg 2	7.1kg 0원	a contra	12 The Party of the Party of the
2023.05.04 05	135:34 18.2kg 2	6.7kg 0월	-11	
2023.05.04 05	32:57 0.5kg 8	Skg 08	1 1 1 1 1 1	11111111111
	THE OWNER WATCHING THE	CONTRACTOR OF THE OWNER OWNER OF THE OWNER OF THE OWNER OF THE OWNER OWNER OWNER OF THE OWNER OWNE		

									Kg당 가격		원	⊖ 지장
	1비 선택 053000	120		05300	0030		053	00050		05	300100	
1000 M	전원	자동	교민모터	જીમાલના	공기온도	가영 전원	(9) 85	가5 전원	1(H) 25	শূরুগ		
801675												33841
	•	자동	•	error	25.3	•	60	•	59	off		
5300020	48	•	off,off,off	•	•	•	off	off	G	0	0	0.000
운 액셜다운	25						기간설정	2023-05-22		~ 2023	-05-22	
			24	>		시간		SIY.	1488		누적의	21

1 Warranty and specification

Quality warranty

Name of product	Food (Large-capacity r	Wa	irranty Pe	eriod		
Model name		RSV2C				
Manufacturing serial No.						
Purchase date	Month	Date	Year	from the purchase da		
Purchase location						
Client address						
Client name						
Tel. No.				By	Mon.	Year

* This product is warranted as follows in accordance with the standards notified by the Fair Trade Commission under the consumer damage compensation regulations, and will be provided by the customer center at the head office and designated A/S center upon request for service.

- * This product has a one-year free warranty, which is calculated from the date of purchase, so please be sure to specify the date of purchase. (Provided that, if it is unmarked, the warranty period is counted as 6 months from the manufacturing date.)
- $\ensuremath{\mathbbmm}$ This product is warranted in accordance with consumer damage compensation regulations.

% Please keep your warranty card with your user manual as it will not be reissued.% Quality warranty period: 1 year

Product specification

Labeling under the Electrical Appliances Safety Control Act

IX. Warranties and compensation on each type

2 Compensation on each type

Cons	umer damage types	Within warranty period	After warrant period	
	In the event of a failure due to a natural disaster (fire, gas, earthquake, etc.)	Paid repairs	Paid repairs	
In case of a performance, functional failure under normal circumstances	In case of repair or modification by a repairman other than A/S staff or by the consumer in person	Paid repairs	Paid repairs	
	Consumable components and normal wear and tear	Paid repairs	Paid repairs	
	Failure due to other external factors	Paid repairs	Paid repairs	
	If you used the wrong electricity capacity	Paid repairs	Paid repairs	
	Failure due to dropping, such as moving after installation	Paid repairs	Paid repairs	
In cases of willful,	When it is used with parts other than those designated by us (including software)	Paid repairs	Paid repairs	
negligent behavior by the consumer	If repair is not possible	Product exchange after collecting the amount relevant to the paid repair	Product exchange after collecting the amount relevant to the paid repair	
	If repair is possible	Paid repairs	Paid repairs	
	In case of microbial culture failure	Paid sale	Paid sale	



#804, 22, Mora-ro, Sasang-gu, Busan, Republic of Korea T 051-609-9033 F 051-609-9034 H www.resaeng.com